



Step Motor Wiring Diagram




- 6 lead motor
- Note: As with all two phase step motors, you can change the nominal direction of rotation of the motor by changing the polarity in one phase, e.g. swapping the connections made to B+ and B-.
- “NC” means not connected.

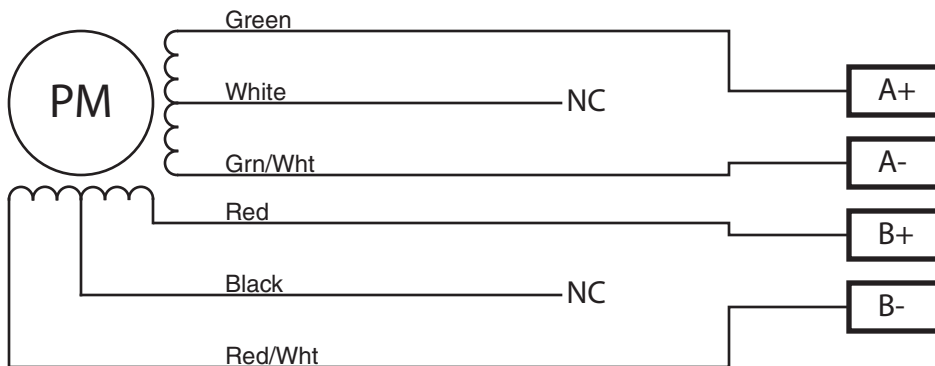

BIPOLAR SERIES CONNECTION

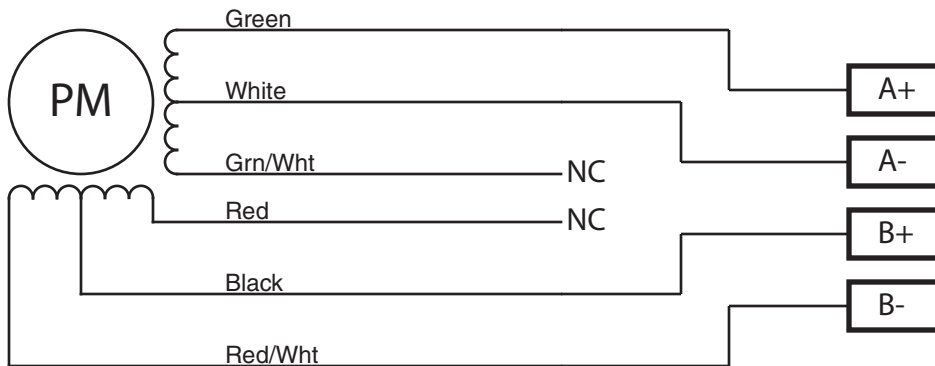

BIPOLAR END-TO-END CONNECTION (Half coil)

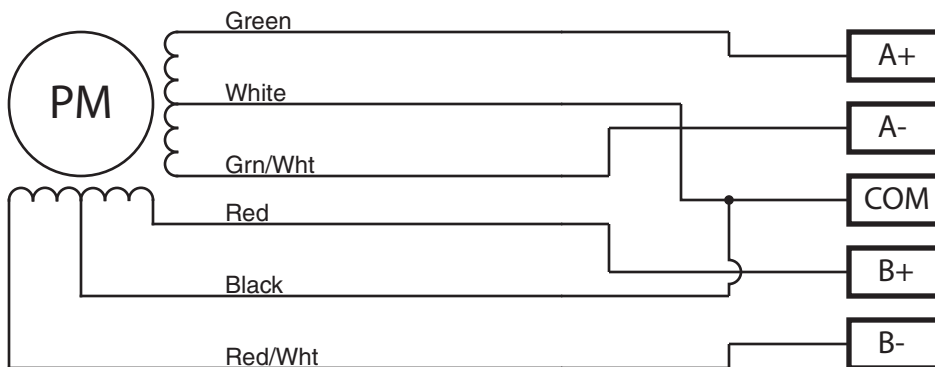

UNIPOLAR CONNECTION